
 
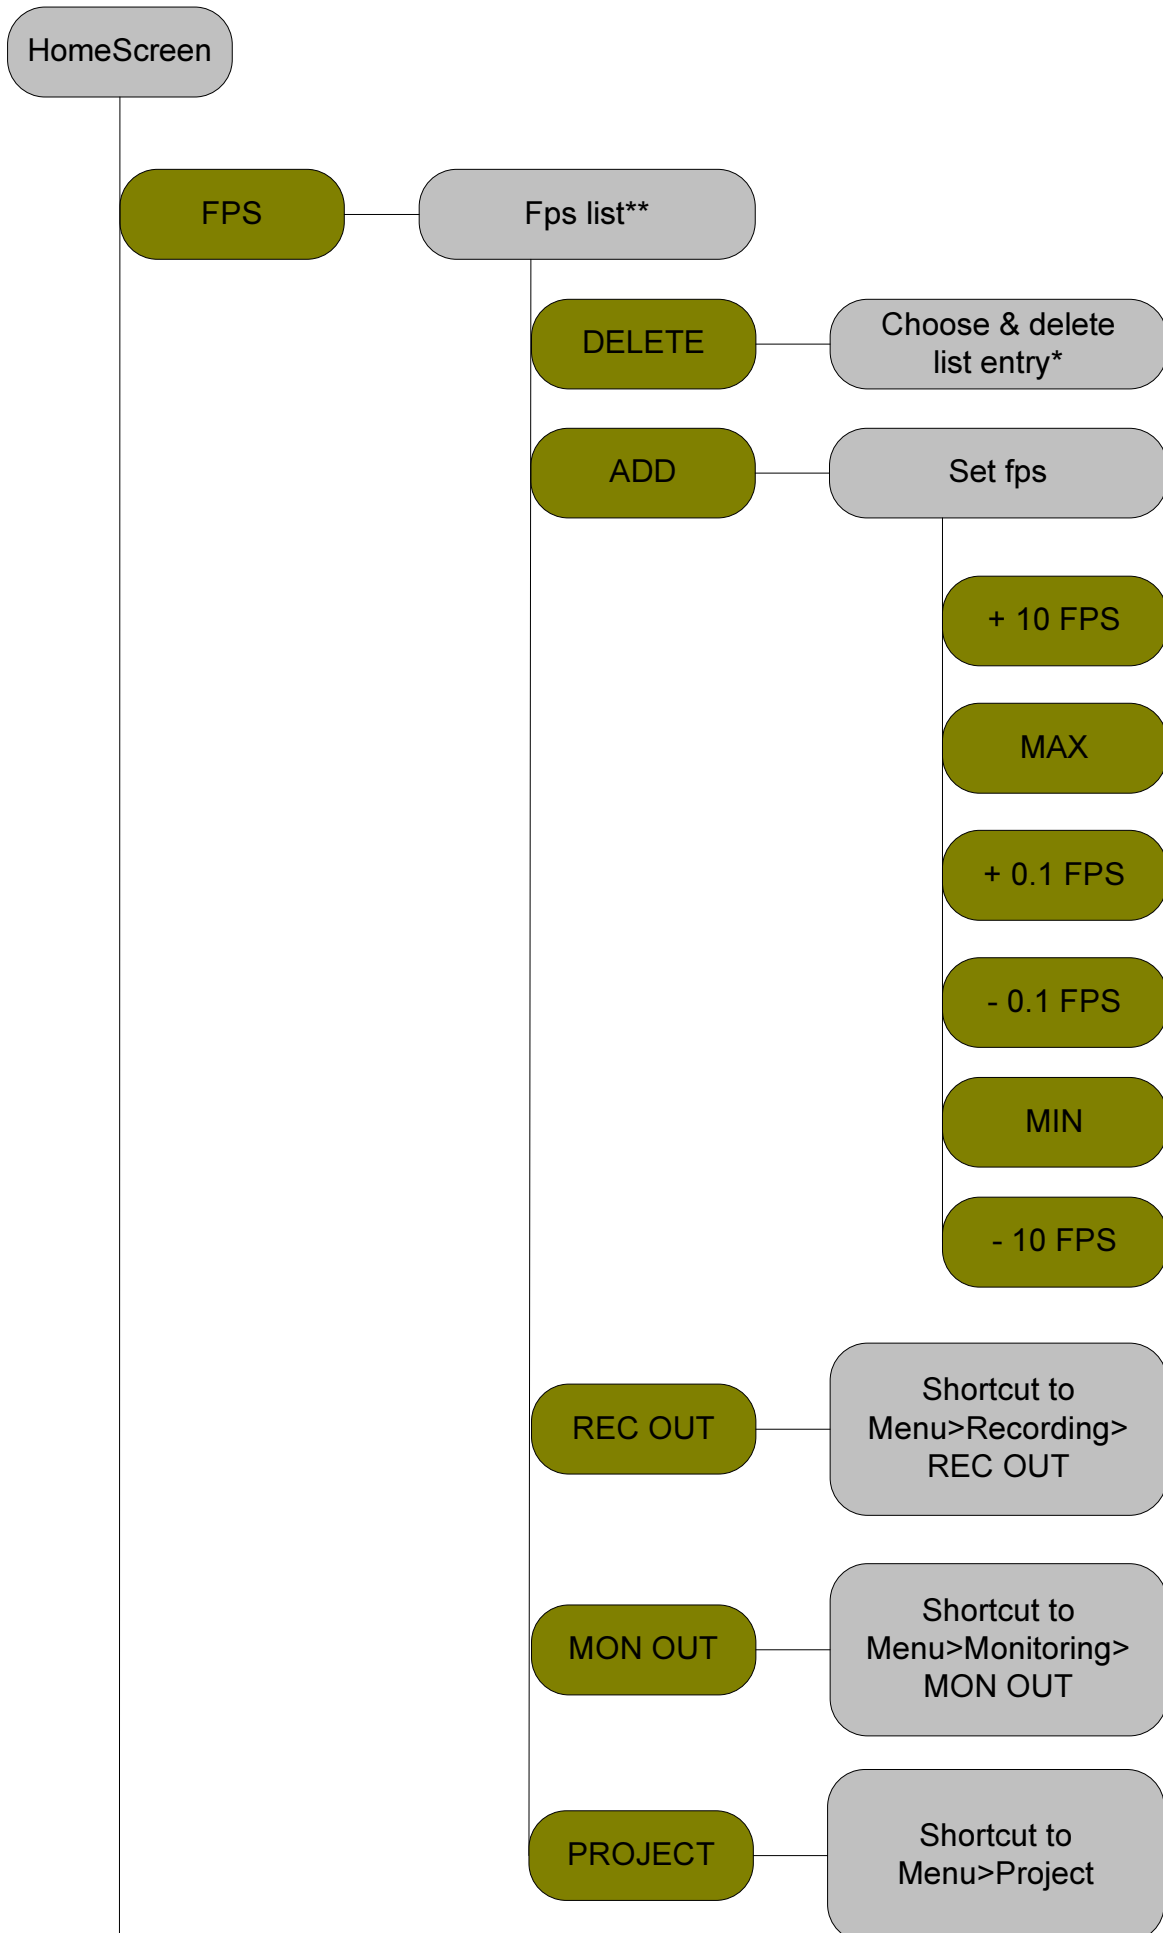



UI Tree for ARRI ALEXA SUP 2.0

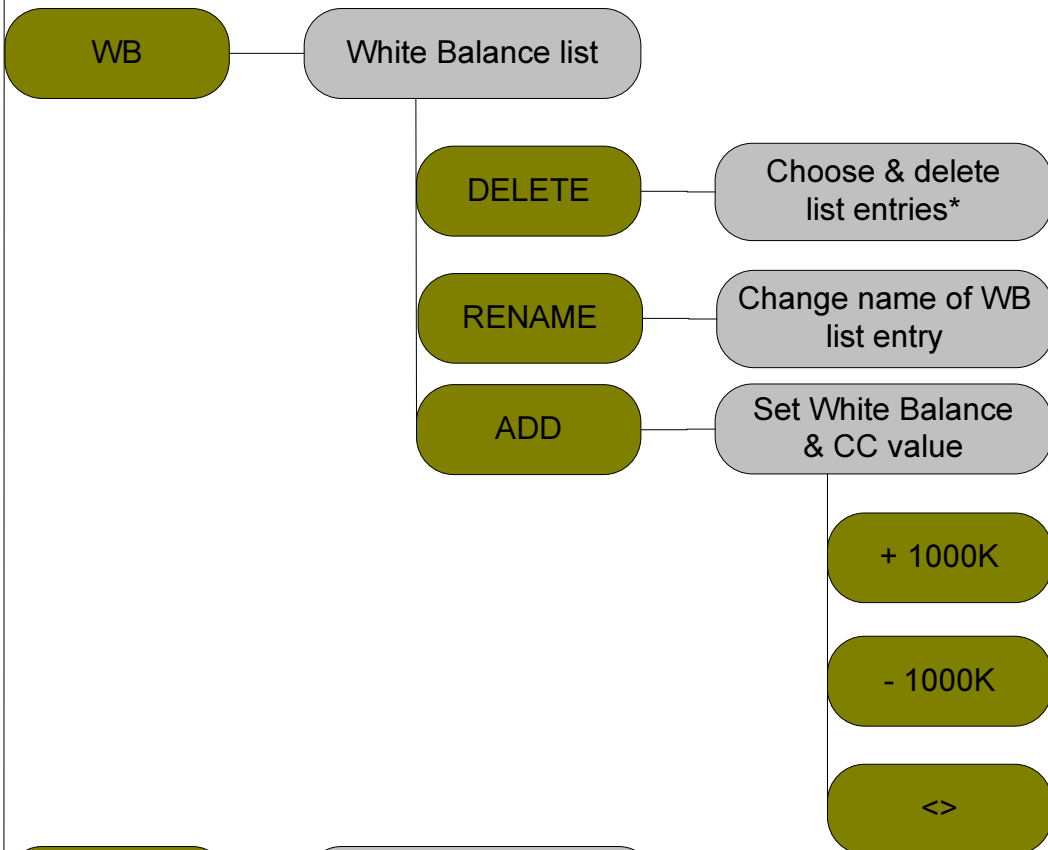

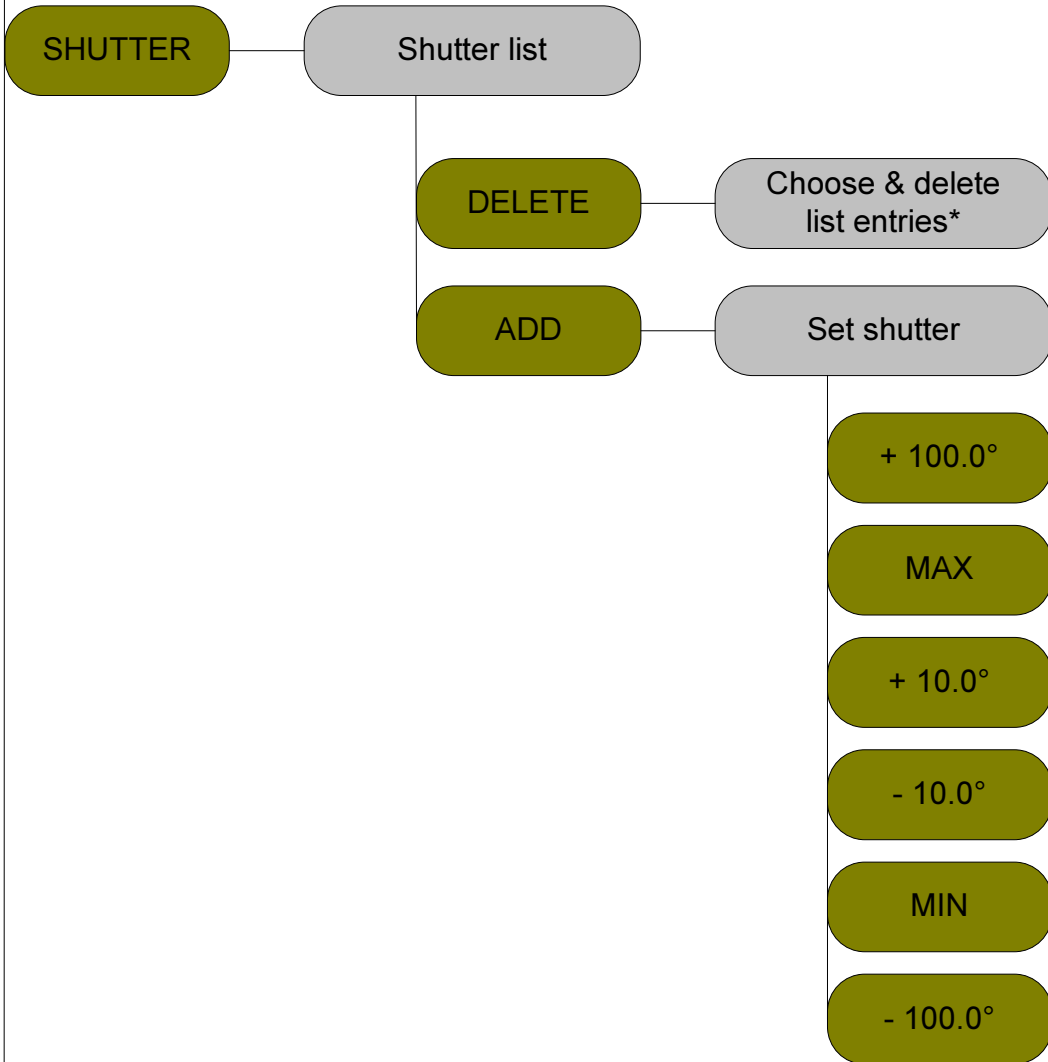

MENU — See own chart

INFO — STATUS

SAVE TO SD — Saves log to SD card

VERSION — Opens Version Info screen

SxS CARDS — Opens SxS CARDS Info screen

SYSTEM — Opens System Info screen

VERSION

STATUS — Opens Status Info screen

SxS CARDS — Opens SxS CARDS Info screen


SYSTEM — Opens System Info screen


SxS CARDS

STATUS — Opens Status Info screen

VERSION — Opens Version Info screen

SYSTEM — Opens System Info screen

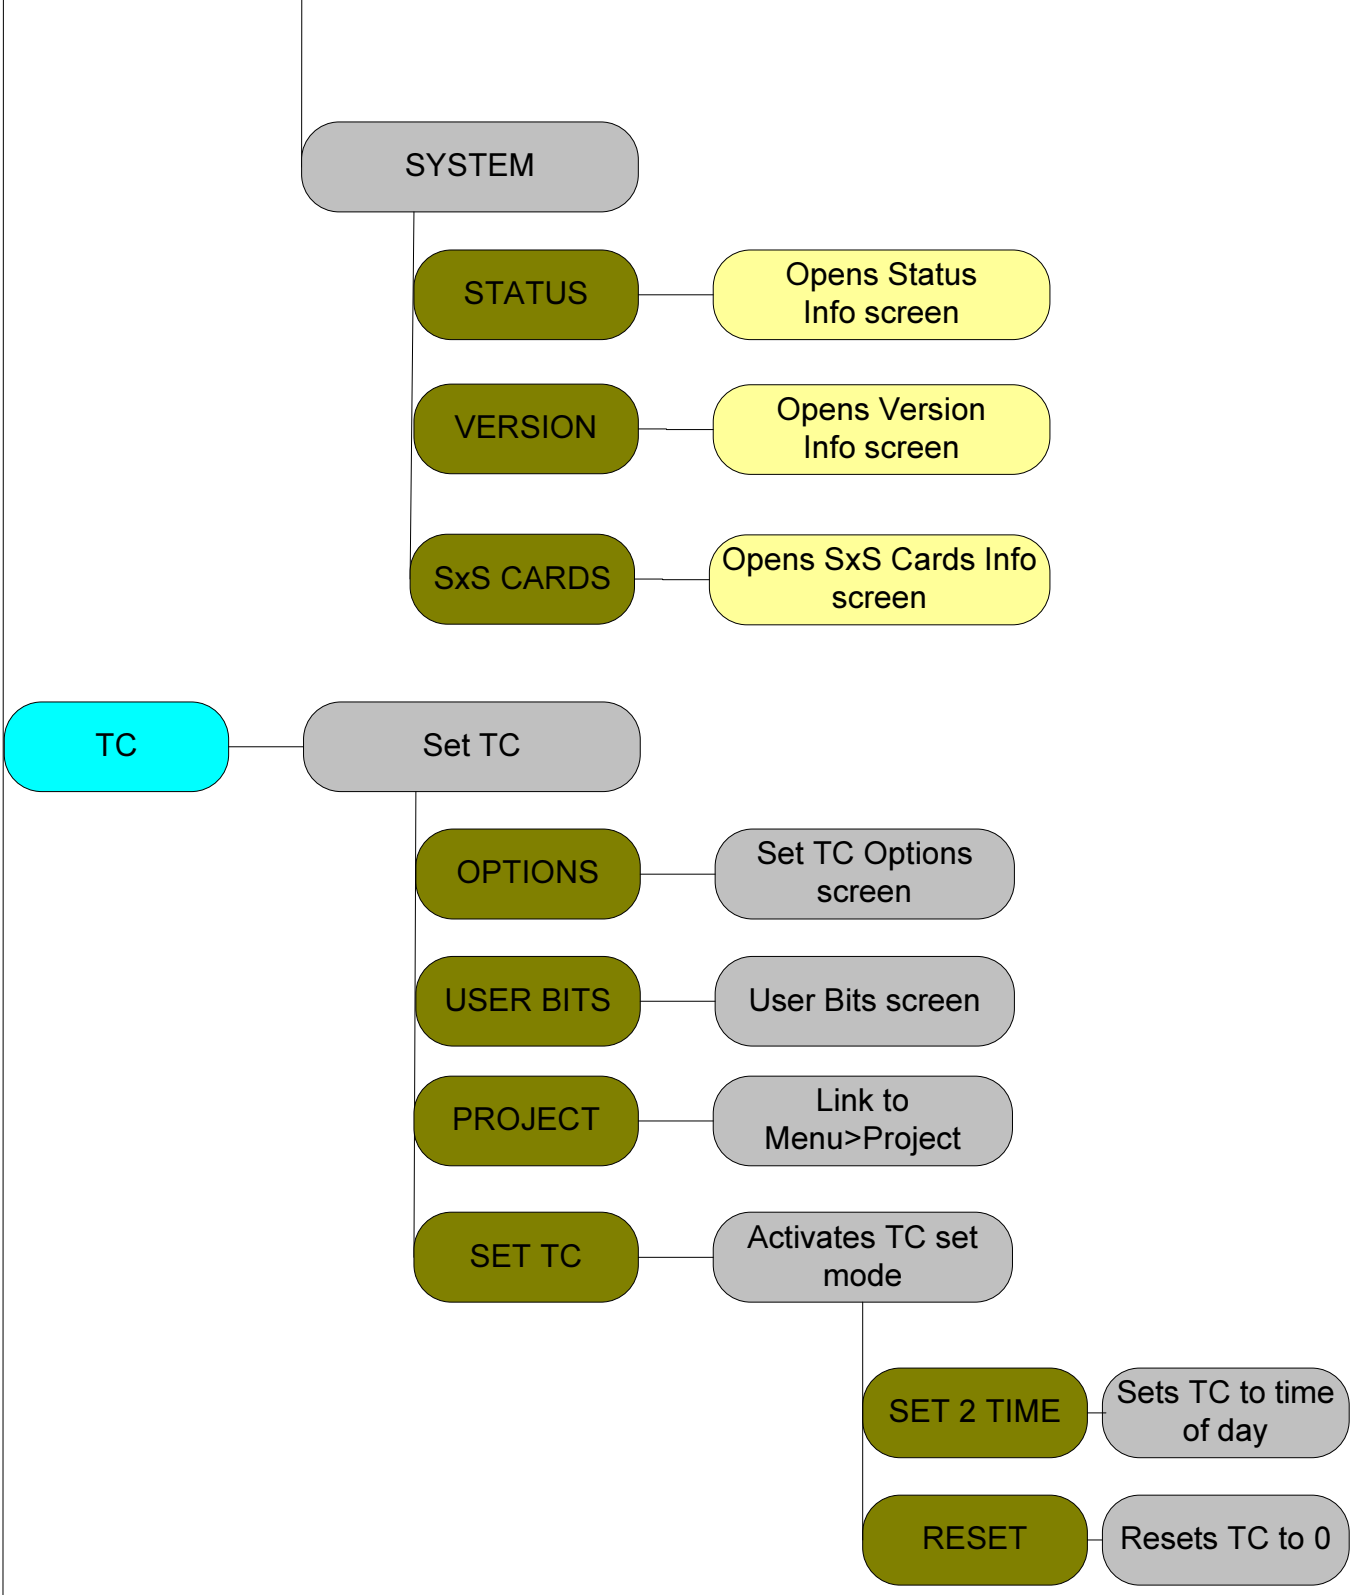

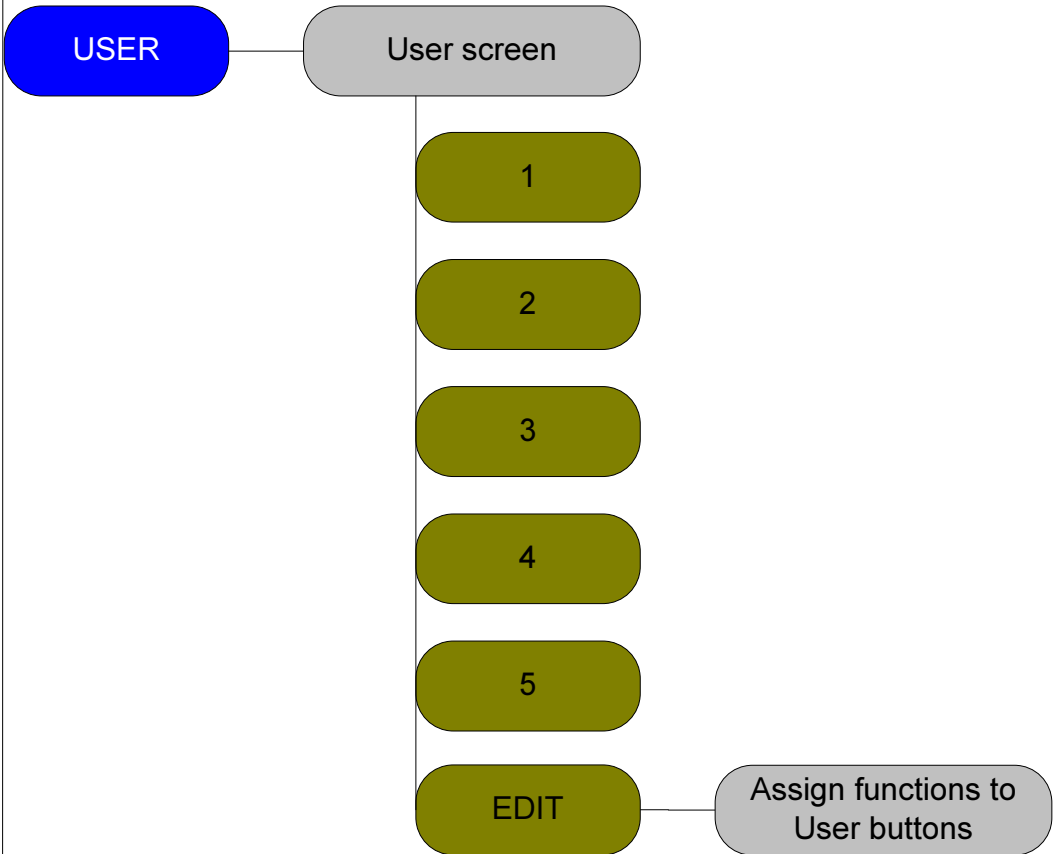

PLAY Loads list of all clips on SxS – no playback!

GRAB Not in use

LOCK Long press to lock/unlock

ON/OFF Long press for power off, short press for power on

HOME Back to HomeScreen

BACK Go to previous screen/Cancel

REC Starts/stops internal recording

* Default list values cannot be deleted

** When Sensor is linked to Rec out, list is not displayed!

LEGEND:

HARD BUTTON

SOFT BUTTON

Screen

Behaviour description

HARD BUTTON