



Changing System Frequency & Format on the Sony SRW-5500 HDCAM-SR **(Equipment with Visionary Forces Pre-Set)**

- **Press: F8, the Systems Menu button**
- **Use “F” buttons 1 through 7 to make Frequency & Format selection**
- **Press: F9 (EXEC) Twice to Save Changes & Set**

***Note:** If you cannot execute the desired changes, go back to **Frame Convert (F6)**. You will see that some selections are highlighted and others are “grayed-out”. You must choose a highlighted selection.

For more Tech-Tips like this one, visit <http://www.visionaryforces.com/>