



Changing the Frequency on the Panasonic AJ-HD3700 D-5

- Press: **Home**
- Press: **Set-Up** Button
- Press: **F4** Button (System)
- Press: **Arrow Buttons** to select the Frequency.
- Press: **ENT** Button after each selection
- Press: **F8** Button (Exit) to finish

For more Tech-Tips like this one, visit <http://www.visionaryforces.com/>