



## Changing the Frequency on the Sony HDW-F500 HDCam

### Using Visionary Forces Settings –

- Press: **PF2** Button
- Press: **F10** Button (System Menu)
- Press: **F2** Button (System Freq). Change the Frequency.
- Press: **F9** Button (Exec) **2x's** to execute.

### Using Non-Visionary Forces Settings –

Using a pen, **carefully** press: **Maintenance** Button **1x** . Holding- down the **SFT** Button, press: **F8** Button (Mainte Exec)

- Release **SFT** Button
- Press: **F9** Button (Others Check)
- Press: **F9** Button (System Menu)
- Press: **F2** Button (System Freq)
- Press: **F9** Button (Exec) **2x's** to execute.

For more Tech-Tips like this one, visit <http://www.visionaryforces.com/>