



Setting Time-Code on the Sony DVW-A500 Digital BetaCam

Completely lift-up the **Front Control Panel** until it is perpendicular to the body of the deck. Then, carefully pull the **Front Control Panel** forward so that it exposes an additional set of buttons. Here you will find two (2) **TC Generator** switches –

- Set one **TC Generator** switch to: **INT**
- Set the other **TC Generator** switch to: **PRESET**

Underneath the **Front Control Panel**, set: **VITC; NON/DROP FRAME MODE** and **REC RUN** switches as required.

On the **Front Control Panel** –

- Press: **TC** Button
- Press: **HOLD** Button.

The first digits will now begin to flash. Using the **Search Dial**, select the digit to change. While holding down the **JOG** Button (located on top of the **Search Dial**), rotate the **Search Dial** to change the value.

- Press: **SET** Button when done.

The **Time-Code** that you selected will appear on the **LED Display** on the **Front Control Panel** when you hit **Play** or **Record**.

For more Tech-Tips like this one, visit <http://www.visionaryforces.com/>