



Changing the System Frequency on the Sony SRW-5500 HDCAM-SR

- Press: **SFT & DIAG** Simultaneously
- Press: **SFT & F8** Simultaneously
- Press: **Set** Button
- Press: **F9** (Others Check)
- Press: **F9** (System Menu) Options:
 - F1 (Systemline): 1080, 720
 - F2 (Systemscan): Interlace, PSF, Progressive
 - F3 (System Frame): 23.98HZ, 24HZ, 25HZ, 29.97HZ, 30HZ, 50HZ, 59.94HZ
 - F4 (System Signal): 422 YPBPR, 444
 - F5 (Record Format): HDCAM SR, HDCAM, AUTO
 - F6 (Frame Convert): Endless, Every System Possible
 - F7 (Active Line): OFF, 1080, 1035
- Press: **F9 (EXEC) Twice to Save Changes & Set**

For more Tech-Tips like this one, visit <http://www.visionaryforces.com/>